

BM30/40 Cleaning Guide

Cleaning Intervals	Operation	Type
Daily (more if needed)	Milk system cleaning cycle	Manual
	Brew unit rinse cycle	Automatic or manual
	Milk frother rinse cycle	Automatic 5 min after drink preparation or manual
	Clean milk frother	Manual
	Clean drip tray	Manual
	Clean grounds container	Manual
Weekly	Brew unit cleaning cycle	Manual
	Clean the bean hopper	Manual
	Clean the water tank	Manual
If requested	Descale	Manual when prompted on the screen
	Filter change	Manual when prompted on the screen




BM30/40 Cleaning Guide

Parts	Usage
Cleaning tablet	Brew unit cleaning cycle
Milk system cleaning liquid	Milk system cleaning cycle
Brush	Manual brush of the brew unit
Descaling powder	Descale cycle
Key	Adjust grinder or milk frother
Milk hose brush	Clean milk hose manually
Damp cloth	Clean all external surfaces

Rinse cycles



1. Rinse cycles can be selected from the internal menu or the shortcut function.

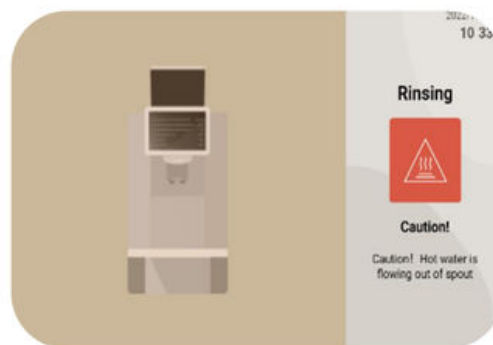

2. Machine is rinsing.



Hot water will be dispensed from coffee spout during rinsing, be careful to avoid scalding.

Screen cleaning



1. Selecting "Screen lock" disables the screen for 12 seconds to allow for wiping down of the screen.



Ensure a microfibre cloth is used to prevent scratching of the screen surface.

Bean hopper cleaning




1. Switch off the coffee machine and disconnect the mains plug.
2. Remove the bean hopper lid using the key to unlock if needed.
3. Turn the metal lever inside until it clicks then remove the bean hopper.
4. Empty it and clean with a damp cloth.
5. Dry the bean hopper completely then place it back and lock the lever back in. Lock the lid with a key if needed.



Bean hoppers can be cleaned when needed but cleaning at weekly intervals is recommended.

Cleaning the brewing unit with a brush

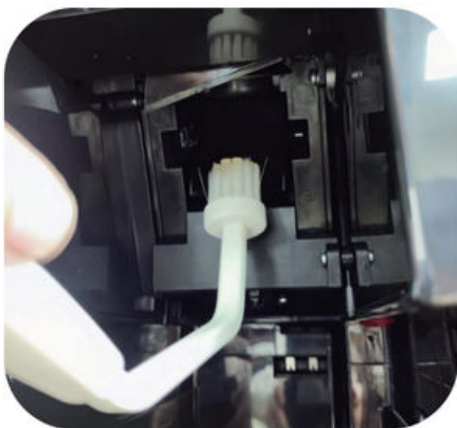

1. Switch off the coffee machine and disconnect the mains plug.
2. Remove the drip tray and grounds draw.
3. Using a brush, clean the shower head of the brew unit from inside the machine.
4. Clear out any grounds from inside the machine that may have fallen out.
5. Replace the drip tray and grounds container.



Brew unit will clog up if beans are ground too fine.
Weekly brushing of the brewing unit is recommended.

Milk frother cleaning



1. Take the milk frother out by squeezing the side clips and pulling down.



2. Disassemble the milk frother into individual components.



3. Clean the milk frother with water and brushes then assemble it back.



4. Replace into the head by pushing up until a click is heard.



If milk frother is not cleaned regularly, milk buildup can block the outlet and prevent it from creating milk foam!

Empty grounds container



1. Remove the grounds container by moving the outlet up, pulling on the drip tray and removing the grounds container.



2. Pour out any coffee grounds.



3. Clean it thoroughly with water.



4. Dry and replace into the machine.




Only empty the grounds container when prompted by the machine during operation or any of the cleaning cycles.


Empty drip tray



1. Remove the drip tray by moving the outlet up then pulling on the drip tray.

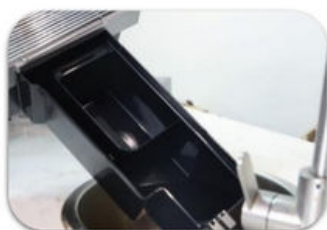

2. Pour out any waste water.

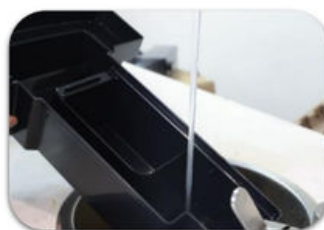

3. Clean it thoroughly with water.



4. Ensure the two metal plates in front of the drip tray are dry and replace into the machine.




“Empty drip tray” will be misreported if the two metal plates in front of the drip tray are not completely dry.


Milk system cleaning cycle



1. From within the 'Maintenance' menu select 'Milk System Cleaning'

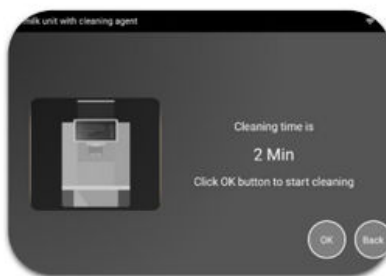

2. Press 'OK' to start the cleaning cycle.

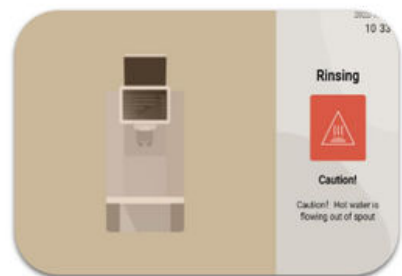

3. Perform every step according to the messages displayed on the screen.




If milk system cleaning with cleaning liquid is not performed regularly, milk buildup can block the outlet and prevent it from creating milk foam!




During cleaning, hot cleaning solution will flow out of the spout. Never reach under the spout while the machine is cleaning.


Brew unit cleaning cycle

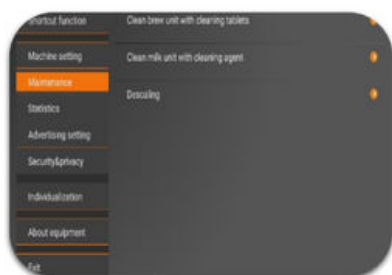

1. From within the 'Maintenance' menu select 'Brew unit clean'

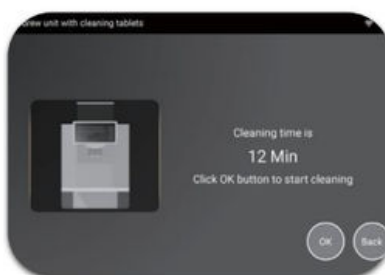

2. Press 'OK' to start the cleaning cycle.

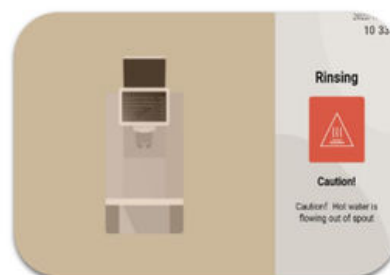


3. Perform every step according to the messages displayed on the screen.



During cleaning, hot cleaning solution will flow out of the spout. Never reach under the spout while cleaning.

Descaling

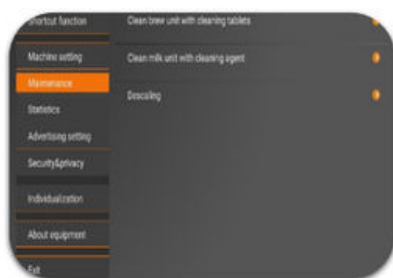

1. From within the 'Maintenance' menu select 'Descaling'



2. Press 'OK' to start the cleaning cycle.



3. Perform every step according to the messages displayed on the screen.



If descaling is not performed at regular intervals scale will build up inside the machine and prevent correct temperatures from being reached or water from flowing at a correct rate.



During descaling, hot cleaning solution will flow out of the spout. Never reach under the spout while the machine is cleaning.

Operational messages

Message	Possible solution
The drip tray is full	Need to empty the drip tray
Install drip tray	Need to install drip tray or it is not in the correct position
Empty grounds container	Need to empty coffee grounds after every 50 cups of coffee
Fill water tank	Fill water tank or place the water tank back
Fill beans	Fill the bean hopper with fresh beans
The bean hopper is not in position	Place the bean hopper back and lock in position
Low temperature	Restart the machine
High temperature	Restart the machine